

BASKET LIFTING CRANES

ELEV-CLAV & ELEV-CLAV-R

DESIGNED FOR A SAFE AND EASY MANIPULATION OF HEAVY LOADS

acts son



Basket lifting cranes

ELEV-CLAV & ELEV-CLAV-R



Features

- Easy to use.
- Elevator device with hoist system featuring high lifting power.
- With swiveling support.
- Two models of basket lifting cranes available:

ELEV-CLAV: suitable for CFS-75V and CFS-110V vertical autoclaves.

ELEV-CLAV-R: a reinforced model suitable for CFS-110V and CFS-150V vertical autoclaves.

Operation

- Use the remote control to raise and lower the basket holder hook, depending on whether the upper or lower part of the push-button is pressed. The remote control also includes an emergency stop button.
- Once the basket is filled, attach the hook to the central part of the handle using the supplied basket holder.
- Raise the basket to the required height, then move the swiveling arm, using the swiveling lever, so the basket is positioned directly above the autoclave sterilization chamber.

Safety

- Emergency stop button.
- Engine with self-braking system.
- For your safety, the electric installation should have a ground connection.



Read the specific basket lifting crane manual before installing this accessory.

Basket lifting crane description



Λ

IMPORTANT:

Each crane is factory set to the specific measurements of the autoclave with which it is installed. Should the installation take place after purchasing the autoclave, please contact our technical support team.

5-steps installation of ELEV-CLAV or ELEV-CLAV-R baskets crane into your autoclave


STEP 1

Place your autoclave to the selected working site and be sure to place it on a stable surface.

You should also ensure the autoclave has the necessary boreholes on its left side to install the baskets crane. The height and distribution of these holes is factory set according to the specific purchased autoclave model.

After performing all the previous steps, install the lower support by embedding the platen into the autoclave base, in order to fasten the support into the furniture. The height of the crane lower base is factory set according to the specific purchased autoclave model.


This operation requires lifting the autoclave laterally a little to introduce the platen beneath.

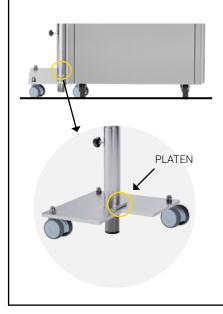






5-steps installation of ELEV-CLAV or ELEV-CLAV-R baskets crane into your autoclave Continued

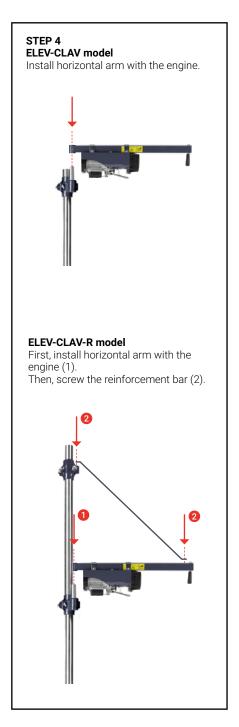



Maintenance

- **1.** Periodically check the steel wire to ensure it is in good condition.
- 2. Check whether the fastening bolts of brackets and the reducer are tightened properly.
- **3.** Check the condition and tightness of the nuts on the steel wire clamps.
- **4.** Periodically check the proper operation of the engine stop switch.
- **5.** Check pulley to verify wear and tear.
- 6. Make sure all moving parts are properly lubricated and oiled. Important suggestion: do not lubricate the stressed wire.
- 7. Verify the steel wire is properly rolled up:

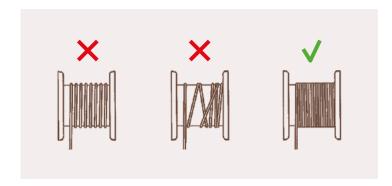

Technical specifications to be taken into account when installing basket lifting cranes

In order to securely handle fully-loaded autoclave baskets, we recommend the purchase of our baskets crane with a revolving arm. There are two models available: ELEV-CLAV for heavy loads up to 30 kg, or ELEV-CLAV-R for very heavy loads up to 40 kg.

References		ELEV-CLAV	ELEV-CLAV-R
Dimensions L x D x H mm		800 x 300 x 2100	800 x 300 x 2600
Power W		480	480
Voltage ∨		230	230
Frequency Hz		50/60	50/60
Weight Kg		40	45
Max. load Kg		30	40
Compatibility with autoclave models	CFS-75V	✓	-
	CFS-110V	✓	✓
	CFS-150V	-	✓
Dimensions of basket lifting cranes + autoclave assembly mm	CFS-75V	1276 x 1296 x 2100	-
	CFS-110V	1276 x 1296 x 2100	1276 x 1296 x 2600
	CFS-150V	-	1543 x 1536 x 2600

